

Indirect User Discharge Permit Fees (including Industrial Users) are calculated based on the following information, which is contained in the RVSA's Rules and Regulations:

SECTION 503: CALCULATION OF USER CHARGES

- 503.1 All User Charges for Indirect Users shall be assessed and collected by each municipality in accordance with Appendix B, attached hereto.
- 503.2 Failure by a User to make timely payment to the municipality in which it is located shall constitute a violation of these Rules and Regulations.

SECTION 504: CALCULATION OF INDIRECT USER DISCHARGE PERMIT FEE

- 504.1 An annual Indirect User Discharge Fee shall be calculated based on the volume and the characteristics of the wastewater discharged. This fee shall include the cost to the RVSA to administer the Permit and to monitor the discharge for pertinent contaminants. The annual Permit fee shall be paid by each municipality on or before the actual due date as indicated on the Invoice, which is usually August 1st. Interest shall be charged at a rate of six (6%) percent per annum and shall accrue on unpaid balances beginning on the date due.

APPENDIX B - INDIRECT USER DISCHARGE PERMIT FEE STRUCTURE

The Indirect User Discharge Permit will be calculated based on the following equation:

$$\begin{array}{ccccccc} \text{Flow} & \times & \text{Loading} & \times & \text{Number of} & = & \text{Permit} \\ \text{Factor} & & \text{Factor} & & \text{Sites samples} & & \text{Fee Points} \end{array}$$

Permit Fee = Permit Fee Points X Per Point Charge

FLOW FACTOR

- If average daily flow is less than 5,000 GPD, the flow factor = 1
If average daily flow is greater than 5,000 GPD,
but is less than 15,000 GPD, the flow factor = 2
If average daily flow is greater than 15,000 GPD,
but is less than 30,000 GPD, the flow factor = 3
If average daily flow is greater than 30,000 GPD,
but is less than 75,000 GPD, the flow factor = 4
If average daily flow is greater than 75,000 GPD, the flow factor = 5

LOADING FACTOR

- If the average BOD or suspended solids concentration is:
Less than 100, the loading factor = 1

Equal to or greater than 100, but less than 200, the loading factor = 2
Equal to or greater than 200, but less than 300, the loading factor = 3
Equal to or greater than 300, but less than 700, the loading factor = 4
Equal to or greater than 700, the loading factor = 5

SAMPLE POINTS

The number of sample points means the number of locations where the RVSA monitors the Permittee's wastewater discharge to the collection system.

POINT CHARGE

In December of each year, the RVSA will calculate the total number of points for the past twelve (12) months for each Indirect User. The total number of points for all Users in the RVSA Wastewater Collection and Treatment System will be calculated. The budgeted cost of running the industrial pretreatment program will be divided by the total number of Permit fee points to determine the per point charge.

/jg

Ind. Permit Fee Assmt. Calculation Info for Web Site

S:\Grimes\Word\Assessments\Assmts. Ind. Permit Fee Calcu. Info for Web Site.doc